


1

POSITION THE SEAT PANEL

Stand the seat in its upright assembly position on the padded surface, with all four slots accessible.

SET THE SEAT UPRIGHT

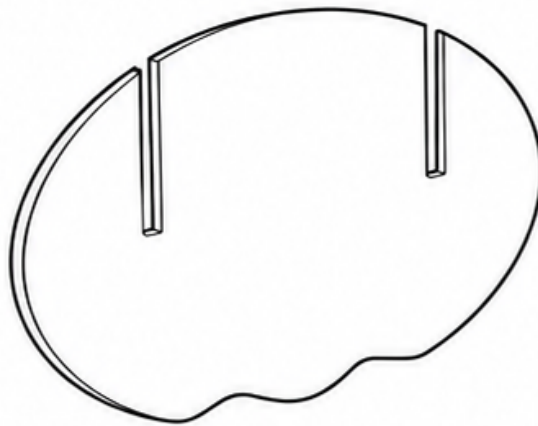


ORIGINAL ASSEMBLY VIEW • REDRAWN AS LINE ART

01 Center the seat on the pad so both people can reach opposite sides.

02 Keep the seat fully supported and steady before inserting either side panel.

2 INSERT THE SIDE / ARM PANELS

Install one panel at a time. One person stabilizes the seat while the second person guides both lower slots straight into the matching seat slots.

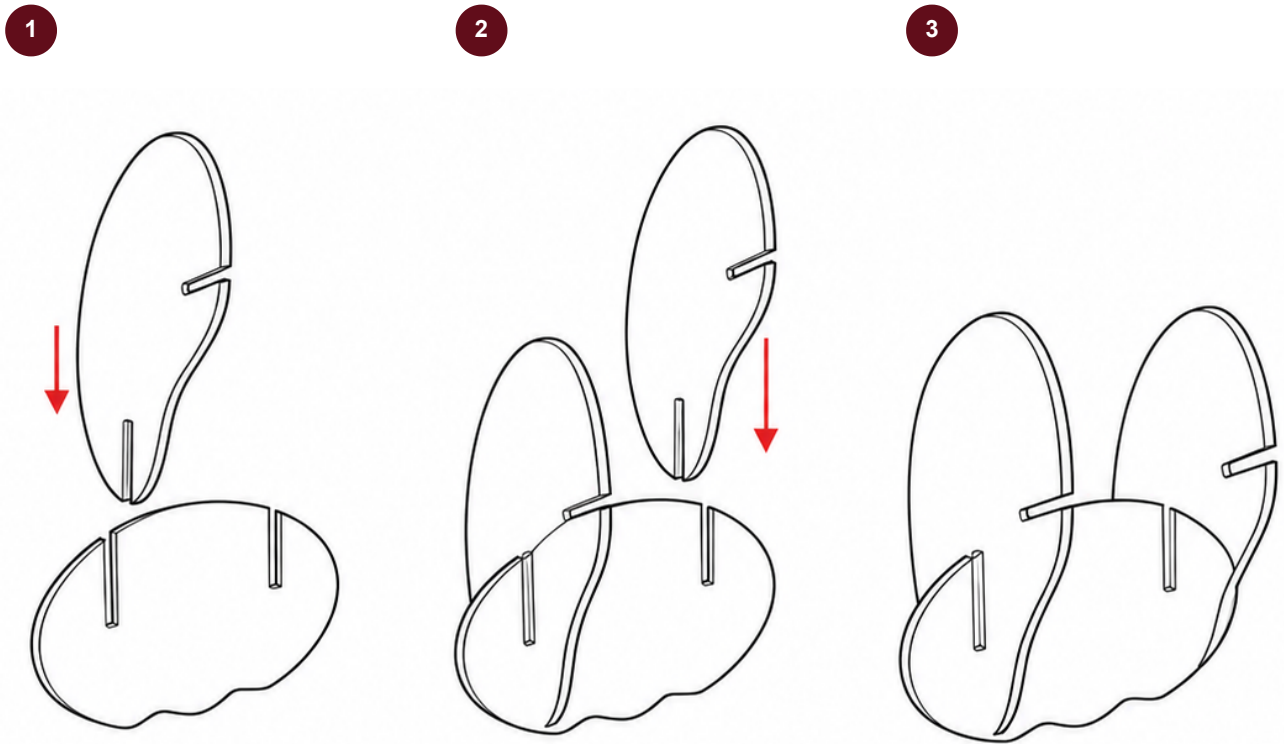

ONE SIDE PANEL AT A TIME • LOWER STRAIGHT DOWN

01 Lower the first side panel slowly until both slots are fully seated.


02 Repeat with the second side panel and confirm the pair stands parallel.

Stop if you feel resistance. Lift the panel, realign both slots and try again. Never widen a slot by rocking the acrylic side to side.

3 ADD THE BACKREST

Hold the backrest above the chair. Align its two slots with the upper slots in the side panels, then lower both sides evenly.

ALIGN BOTH SLOTS • LOWER EVENLY

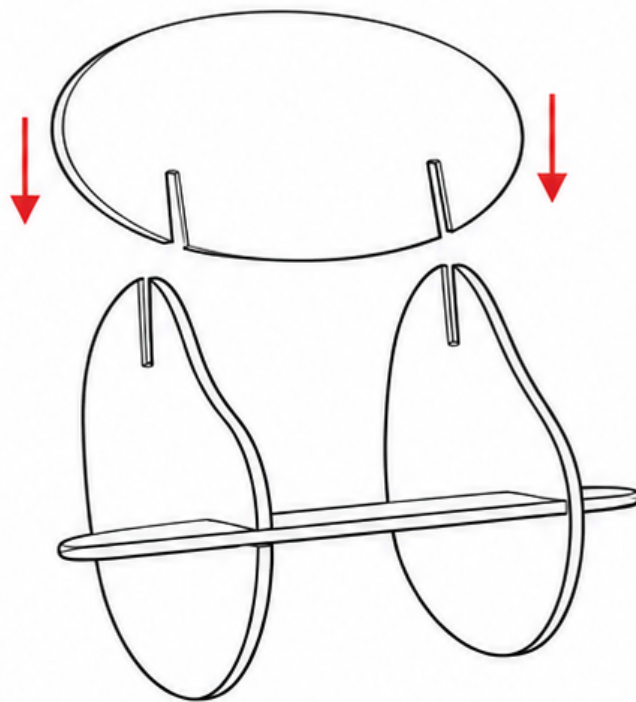

ORIGINAL ASSEMBLY VIEW • REDRAWN AS LINE ART

- 01 Keep the backrest level so one side does not bind before the other.
- 02 Press only with open hands near the joints—never on a projecting edge.